



Check hygrostat type FG80H, 0-5V:

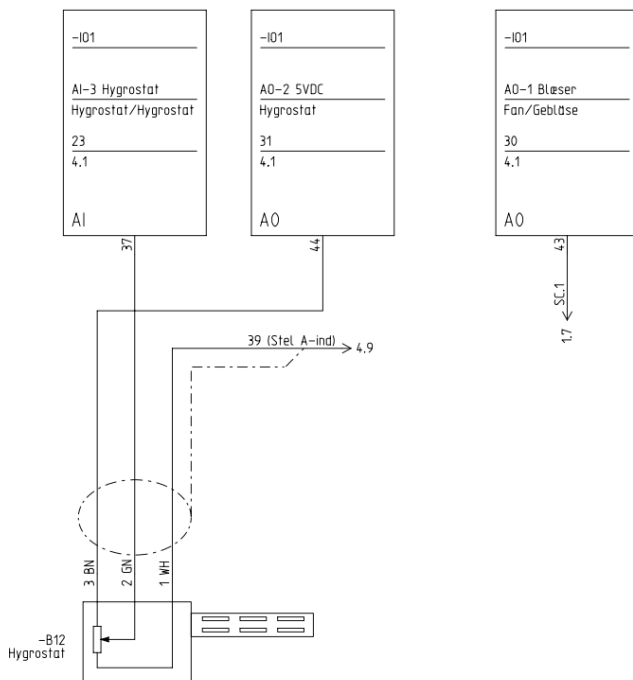

1. Check that terminal 1 at the hygrostat goes to terminal 39 at the FlexIO board.
Check that terminal 2 at the hygrostat goes to terminal 37 at the FlexIO board.
Check that terminal 3 at the hygrostat goes to terminal 44 at the FlexIO board.
As shown on the wiring diagram above.
2. Check that there are 5V DC between terminal 1 and terminal 3 on the hygrostat.
3. Go to menu/service/FlexIO.
4. Check that Aout1 = 5V; AInd1 = 0-5V; AInd2 = 0-5V.

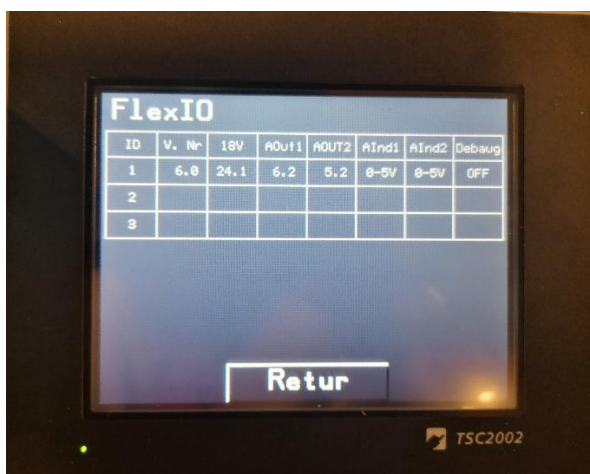

5. Take a photo of the screen and send it to us at service@lillnord.dk