



**LILNORD**

## **Manual**

**Replacement / exchange  
of Eprom, computer and battery**

# Index

- Replacing of Eprom .....
  
- Exchange of computer .....
  
- Replacing of battery .....
  
- Before replacing the Eprom, computer and battery
  - Settings FR .....
  - Settings DC.....

## Replacing of Eprom


To replace the Eprom computer opens by un-screwing four screws on the end.

At the opposite end loosen two screws, it makes it easier to pull the PCB out

Grab hold in the front and back plate and pull the PCB out of the box.



With a small screwdriver lift of the old Eprom carefully.

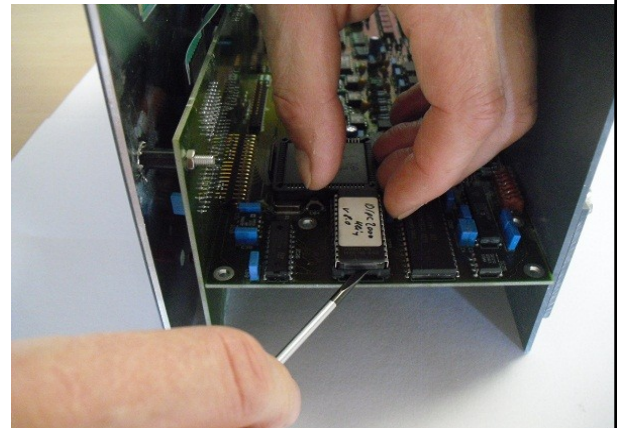

Before the new Eprom is inserted, check that the pins are aligned

Place the Eprom against a plane surface and gently press down until the pins are aligned.


Both sides to be controlled in this manner..




## Replace of Eprom

At the tip of the arrow, there is a small notch, the same in the Eprom.


The two notches should be aligned.

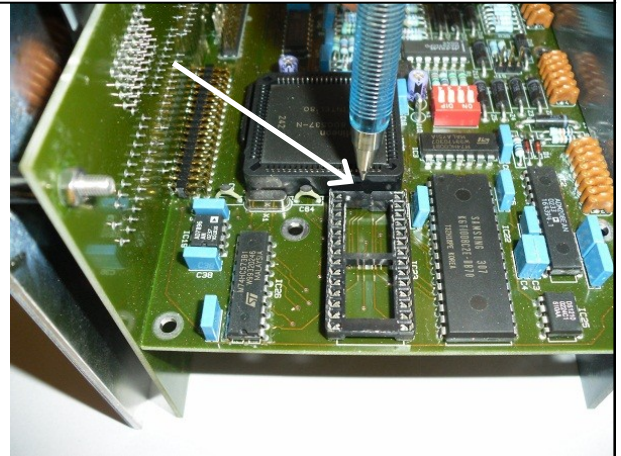

Notch in the Eprom must face such that it is placed over the notch in the socket.

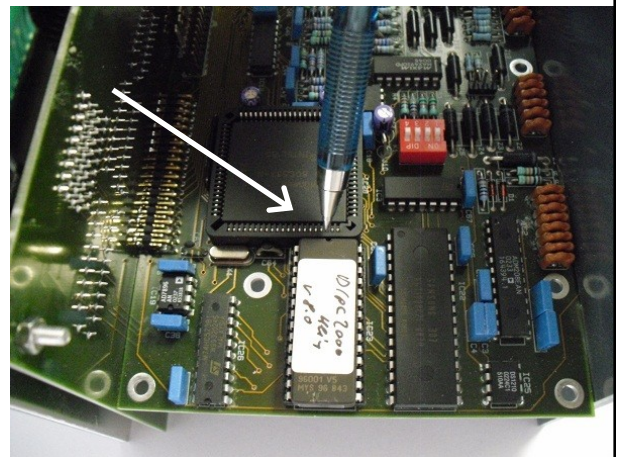

Insert the Eprom gently, first one side then the other. Be sure all pins are positioned correctly. Then press vertically onto the Eprom, to ensure that it is correctly placed.

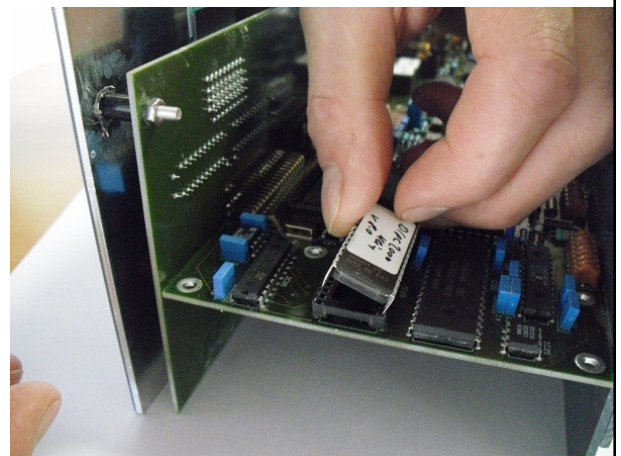

## Exchange of computer

Before the exchange read all settings and note them in the table. (see page 8-10)


Turn off the plant and exchange computer.

Turn on the plant. Settings entered after the table.


## Replace of battery

The computer opens the same way as by replacing the Eprom (see page 3)


Has the battery not been replaced before, there's a transport strip on it.

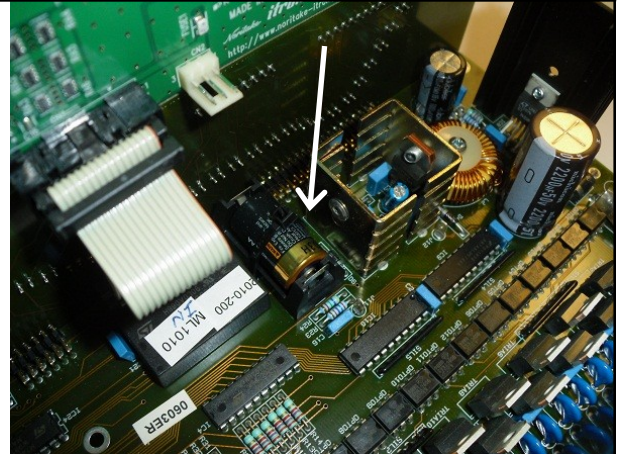

This strip is removed and it is not necessary to add a new one.

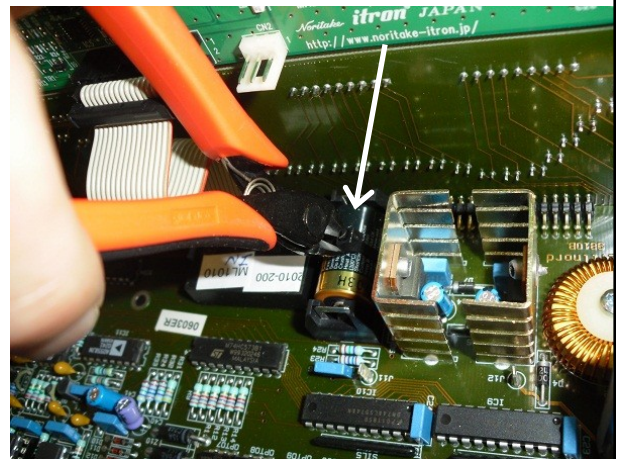

The battery should be facing the +-pole towards the center. (see picture)

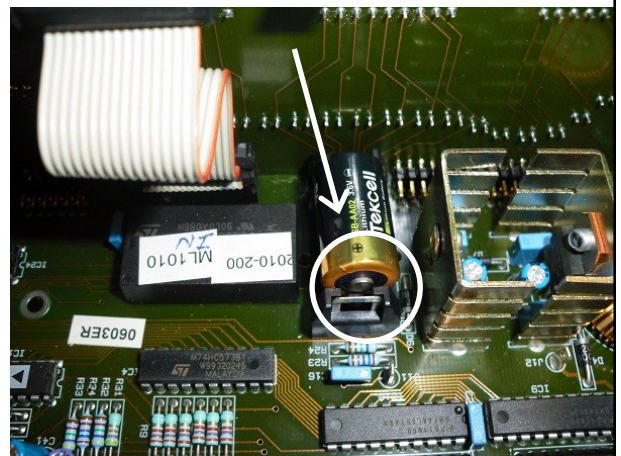

# Before replacing the Eprom, computer and battery

## Settings FR

Before replacing the Eprom and battery, note down all the settings. They will disappear when the Eprom and the battery are replaced.

Batteriet kan udskiftes med strømmen tilsluttet, derved undgås tab af indstillinger.

<b>Bake off:</b>	<b>Day:</b>	<b>Time:</b>	<b>Prg.:</b>	<b>H. day:</b>
	_____	_____	_____	_____
	_____	_____	_____	_____
	_____	_____	_____	_____
	_____	_____	_____	_____
	_____	_____	_____	_____
	_____	_____	_____	_____

<b>Program:</b>	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>	<b>FB</b>
<i>Freezing:</i>	_____	_____	_____	_____	_____
	_____	_____	_____	_____	_____
	_____	_____	_____	_____	_____
<i>Store:</i>	_____	_____	_____	_____	_____
<i>Thaw-out:</i>	_____	_____	_____	_____	_____
	_____	_____	_____	_____	_____
<i>Proving:</i>	_____	_____	_____	_____	_____
	_____	_____	_____	_____	_____
	_____	_____	_____	_____	_____
<i>Soft cooling:</i>					_____
<i>Fan:</i>					_____
<i>Standby:</i>					_____

### Standard setting:

*Clock:* Set the clock after the replace

*Lock-out:* Keyboard lock-out: \_\_\_\_\_

# Before replacing the Eprom, computer and battery

## Settings FR

*Curves (programmable):*

No.:	Step:	Start temp.:	Time:
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

*Fan:* Step: \_\_\_\_\_

### Service:

*Language:* Set the language after the replace

*Steam:* Steam: \_\_\_\_\_ Cleaning: \_\_\_\_\_ Water: \_\_\_\_\_

*Floor heating:* Store: \_\_\_\_\_ Proving: \_\_\_\_\_ Door: \_\_\_\_\_  
Step: \_\_\_\_\_

*Oven:* Oven: \_\_\_\_\_ Function: \_\_\_\_\_ Heating time: \_\_\_\_\_

### Supervision:

*Guard nr.:* Dial up: \_\_\_\_\_ Telephone nr.: \_\_\_\_\_

*Phone no.:* Modem telephone nr.: \_\_\_\_\_ ID nr.: \_\_\_\_\_ Series nr.: \_\_\_\_\_

*Communication:* Communication: \_\_\_\_\_

*System log:* System log: \_\_\_\_\_ Time bet. loggings: \_\_\_\_\_

# Before replacing the Eprom, computer and battery

## Settings FR

Unplug the computer and connect it again.

Press the Clear key until the display shows „Opsætning“

### Settings:

1 Serie nr.:

\_\_\_\_\_

2 Fan speed: Heat: Steam on: Cool:

\_\_\_\_\_%\_\_\_\_\_%\_\_\_\_\_%\_\_\_\_\_

3 Cancel log: Hygostat: Batteri:

\_\_\_\_\_%\_\_\_\_\_%\_\_\_\_\_%

4 Fejl 21: Fejl 60: Filter I: Filter II: Filter III:

\_\_\_\_\_

5 Modem auto answer: Blind dial:

\_\_\_\_\_

6 Dehumidification:

\_\_\_\_\_

# Before replacing the Eprom, computer and battery

## Settings DC

Before replacing the Eprom and battery, note down all the settings. They will disappear when the Eprom and the battery are replaced

Batteriet kan udskiftes med strømmen tilsluttet, derved undgås tab af indstillinger.

### Standardindstillinger:

*Ur:* Indstilles efter udskiftning.

*Lås:* Lås: \_\_\_\_\_

*Soft Freezing:* Soft Freezing: \_\_\_\_\_ Blæser: \_\_\_\_\_ Indfrysning: \_\_\_\_\_

*Afrimning:* 1: \_\_\_\_\_ 2: \_\_\_\_\_ 3: \_\_\_\_\_ 4: \_\_\_\_\_

### Service:

*Sprog:* Indstilles efter udskiftning.

*Afrimning:* Temp.: \_\_\_\_\_ Dryptid: \_\_\_\_\_

### Overvågning:

*Vagt nr.:* Opkald: \_\_\_\_\_ Telefon nr.: \_\_\_\_\_

*Telefon nr.:* Modem telefon nr.: \_\_\_\_\_ ID nr.: \_\_\_\_\_ Serie nr.: \_\_\_\_\_

*Kommunikation:* Kommunikation: \_\_\_\_\_

*Systemlogger:* Systemlogger: \_\_\_\_\_ Type: \_\_\_\_\_ Tid logning: \_\_\_\_\_

# Before replacing the Eprom, computer and battery

## Settings DC

Unplug the computer and connect it again.

Press the Clear key until the display shows „Opsætning“

### Settings:

1 Serie nr.:

\_\_\_\_\_

2 Fan speed: Heat: Steam on: Cool:

\_\_\_\_\_%\_\_\_\_\_%\_\_\_\_\_%\_\_\_\_\_

3 Cancel log: Hygrostat: Batteri:

\_\_\_\_\_%\_\_\_\_\_%\_\_\_\_\_%

4 Fejl 21: Fejl 60: Filter I: Filter II: Filter III:

\_\_\_\_\_

5 Modem auto answer: Blind dial:

\_\_\_\_\_

6 Dehumidification:

\_\_\_\_\_

7 Defrosting type: Fordamper antal:

\_\_\_\_\_

